



● Manuale di Programmazione
Distributore automatico

Mod. **Eurosnacky Pocket**

● Programming Manual for the
Vending machine

Mod. **Eurosnacky Pocket**

● Programmierhandbuch
für Warenautomat

Mod. **Eurosnacky Pocket**

● Manual de Programación
distribuidor automatico

Mod. **Eurosnacky Pocket**

● Manuel de programmation
du distributeur automatique

Mod. **Eurosnacky Pocket**



Programming Manual for the vending machine model EuroSnacky Pocket

VERS. SOFTWARE E1.00

CONTENTS

1.1	INTRODUCTION.....	3
1.2	PROGRAMMING MODE.....	2
1.3	COUNTER OF DISPENSED PRODUCTS.....	3
1.4	PRICE SETTING	5
1.5	CURRENCY SETTING.....	5
1.6	SETTING OF COIN ACCEPTOR LINES	5
1.7	SETTING OF REMAINING CREDIT PERSISTENCY.....	7
1.8	SETTING OF THE TYPE OF POWER SUPPLY	7
1.9	TEST	8
1.9.1	CHECKING OF BATTERY OPERATION	8
1.9.2	CHECKING OF KEYBOARD OPERATION.....	9
1.9.3	CHECKING OF COIN ACCEPTOR LINES	9
1.9.4	CHECKING OF OPERATION OF PRODUCT DISPENSING MOTORS	9
2.0	ACCOUNTING	10
2.1	RESTORATION OF STANDARD CONFIGURATION	12
2.2	SETTING OF MDB PROTOCOL.....	13
2.3	SETTING OF STORAGE FUNCTION.....	14
2.3.1	STORAGE INVENTORY	14
2.4	ERROR MESSAGES	15

1.1 INTRODUCTION

The vending machine model EuroSnacky Pocket is provided with a software which allows to visualize and set a wide range of parameters and functions in a clear and easy way. The programming operations are performed through the display and the keyboard generally used for selection of products. In the programming mode (see para. 1.2) the function of the keys will be different and the display will allow to visualize the parameters to be modified.

1.2 PROGRAMMING MODE

In order to have access to the operating parameters it is necessary to get into the programming mode through the “service” push-button located in the middle of the electronic card.

In order to get back to the normal operation mode, you have only to press again the service push-button, after ~90 seconds without pressing any push-button, the machine will automatically get out of the programming mode.

In the programming mode the display will visualize:

S S S S

The function of the keys used is the following:

Key ① : ↓ Allows to scroll the menu of functions / increases the values

Key ② : ↑Allows to scroll the menu of functions / decreases the values

Key ③ : **Enter / Save**Allows to get into a sub-menu, to confirm any modification and then to get back to the main menu.

1.3 COUNTER OF DISPENSED PRODUCTS

The machine is provided with two counters, **CCII** e **CCtt**, to count the number of products dispensed from each shelf.

CCII stores the number of products dispensed cash.

CCtt stores the number of products dispensed with payment through credit key.

Select the counter to be visualized (ex. CCII) using the keys ① and ②.

The display will visualize:

CCII

Press the key ③ and select, through the keys ① and ②, the counter of the shelf to be visualized (ex. shelf no. 3).

The display will visualize:

C 3

In order to confirm the selected counter, press again the key ③.

The display will visualize the number of dispensed products:

XX

Press ③ in order to get out. It is possible to reset all the counters selecting CANC at the end of the menu CCII. To confirm resetting press the key ③.

Follow the above mentioned procedure selecting "CCtt" to visualize the counter of dispensed products with payment made through key systems.

1.4 PRICE SETTING

The selling prices of products can be programmed independently for each shelf. Also, it is possible to separate the prices of products purchased cash (**PPII**) from the prices of products purchased through credit key (**PPtt**).

If no key payment system is installed in the machine, it is not necessary to set **PPtt** . The price setting is made in both cases in the same way. Select the price menu to be programmed (ex. **PPII**) using the keys ① and ②. The display will visualize:

PPII

Press to key ③ and select, through the keys ① and ② , the shelf where the price should be modified (ex. shelf no.3).

The display will visualize:

P 3

In order to confirm the selection, press again the key ③.

The display will visualize the previously set price, that can be increased or reduced by increases equivalent to the value of the lowest value coin programmed (see para. 1.5), using again the keys ① and ②.

Once the desired price has been reached, press ③ to save the setting. Follow the above mentioned procedure to set the prices of all the shelves to be modified.

Press ⑦ to get back to the starting menu **PPII**.

1.5 CURRENCY SETTING

The currency setting allows to fix a scale factor to visualize the credit. This option allows to use the vending machine with most of the existing currencies. In fact, 8 options are available (0.01 - 0.05 - 0.1 - 0.5 – 1 – 5 – 10 – 50) among which the minimum coin value to be used shall be identified.

The scale factor selection determines the increase value through which it will be possible to set the prices (**PPII** - **PPtt**) as well as the correct visualization of the counters (**CCII** – **CCtt** - **tttt**).



In all the machines delivered complete with payment systems the proper currency has already been set.

In order to modify the currency setting, in the programming mode, select the parameter EEEE using ① and ②.

The display will visualize:

E E E E

Press then the key ③ to visualize the scale factor value that has been previously set (ex. "1"):

The display will visualize:

1

Using ① and ② select the value to be set. To confirm the choice and get back to the previous menu press ③.

Example: Regarding the Euro, the lowest value coin generally used is the 5 cent. Therefore, the value of EEEE shall be set to 0.05. This value will allow to set the product prices with an increase/reduction of 50 cent of Euro.

1.6 SETTING OF COIN ACCEPTOR LINES

In order to interface correctly a coin acceptor with the vending machine it is essential to program the parameter "LLLL". Through this setting, a value to the input lines to be used for payment systems is added. There are 6 lines for the electronic acceptor (L1 + L6). In this connection, it is essential to know the type of programming of the payment system to be used.



Before proceeding with programming of the lines, the currency value (EEEE) para. 1.5. must have been put in.



In all the machines delivered complete with payment system, programming of the coin acceptor lines has already been made.

In order to modify setting of the coin acceptor lines, in the programming mode, select the parameter LLLL using ① and ②.

The display will visualize:

L L L L



MD04309A

Press the key ③ and select, through the keys ① and ②, the line where the value should be modified (ex. line 2).

The display will visualize:

L	2
---	---

Press then the key ③ to visualize the value that has been previously set (ex.0.10):

The display will visualize:

0.10

Using the keys ① and ② it is possible to modify the value of the visualized line. In order to confirm the modification and get back to the main menu press the key ③.

As mentioned in the user's manual, coin acceptors with output type "Pulse" or " Parallel" can be used indifferently. In both cases programming of lines is the following:

A) Programming of payment systems with output type "Pulse".

Should a coin acceptor with "pulse" output be used, the line 3 (L3) shall be programmed with the value assigned by the line itself to the pulse (check the features specified by the manufacturer). The other lines (L1 – L2 – L4 – L5 – L6) shall be set to zero. In this mode, on each of the pulses coming from the coin acceptor, the value set on "L3" shall be credited.

B) Programming of payment systems with output type "Parallel"

Should a coin acceptor with "parallel" output be used, it is necessary to program all the lines (L1÷ L6) with the respective value (check the features specified by the manufacturer). The non-used lines shall be set to zero.

Example: In order to interface a coin acceptor in Euro having the following configuration:

CH1=0,05 €; CH2=0,10 €; CH3=0,20 €; CH4=0,50 €, it is necessary to program the machine as follows: L1=0,05; L2=0,10; L3=0,20; L4=0,50; L5=0; L6=0.

1.7 SETTING OF REMAINING CREDIT PERSISTENCY

Any credit resulting from a sale cash can be used in two different ways: leaving the remaining credit for the following sales; eliminating the remaining credit. In the latter case, the value will be cashed and entered by the

counter “rES”(see para. 2.0). Should the first option be chosen, it is possible to fix the persistency time of remaining credit.



All the machines are supplied with a remaining credit persistency time infinite (buCr=240)

In order to set a different credit persistency time, in the programming mode, select the parameter “buCr” using ① and ②.

The display will visualize:

b u C r

Press then the key ③ to visualize the value that has been previously set (ex. 120 seconds):

The display will visualize:

1 2 0

Using ① and ② select the value to set. In order to reset the value press ⑧.

To confirm the choice and get back to the previous menu, press ③.

The following table summarizes the different possibilities:

buCr	Remaining credit persistency time
0	Null
1 ÷ 239	Included between 1 ÷ 239 seconds
240	Infinite

Also in the multiple sale mode ($1 < buCr < 239$) any non-used remaining credit will be entered by the counter “rES” (see para.2.0).

1.8 TYPE OF POWER SUPPLY

The vending machine can be connected with the mains or battery operated, being the battery installed inside the machine itself. Through this function it is possible to select the type of power supplied. In the programming mode, select the parameter “POtE” using ① and ②.

The display will visualize:

PotE

Then press the key ⑥ and choose, through the keys ① and ② (rEtE - bAtt), the type of power supply. To confirm the choice press the key ③.

1.9 TEST

Through the TEST function, it is possible to check the good working order of some machine components. During such the counters are not increased, nor the storage function is compromised. The available tests are shown in the table here below.

Item	Description
tbAt	Checking of battery operation (on the battery-operated machines)
tASt	Checking of good working order of keyboard
LInE	Checking of coin acceptor lines
Tor1÷3	Checking of good working order of product dispensing motors

In order to have access to the various tests, in the programming mode, select the parameter “tESt” using the keys ① and ②.

The display will visualize:

tESt

Press the key ③ and choose, through the keys ① and ②, the item to be selected.

1.9.1 CHECKING OF BATTERY OPERATION

This test allows to check that the card gets connected and disconnected correctly.

The display will visualize:

tbAt

Press the key ③ to confirm the choice.

The display will visualize:

SLSL



MD04309A

At this point the card is in the "low consumption" mode; pressing any key or putting in a coin the card gets connected and the display shall visualize:

LOn

Wait a few seconds, and the display will visualize again SLSL. In order to get out, keep the key ③ pressed.

1.9.2 CHECKING OF KEYBOARD OPERATION

This test allows to check the good working order of the keyboard.

The display will visualize:

tASt

Press the key ③ to confirm the choice.

Check on the display correspondence of the keys that are pressed. Wait a few seconds to get back to the previous menu.

1.9.3 CHECKING OF COIN ACCEPTOR LINES

This test allows to check correspondence of the coin acceptor lines.

The display will visualize:

LInE

Press the key ③ to confirm the choice. Putting in the coin acceptor the various coins used, the display will show the corresponding coin acceptor line. In order to get out and get back to the previous menu, press ③.

1.9.4 CHECKING OF OPERATION OF PRODUCT DISPENSING MOTORS

This test allows to check that the single motors for product dispensing are in good working order.

Choose through the keys ① and ② the motor to test (ex. Motor 1).

The display will visualize:

tOr1

Pressing again ③ the chosen motor will do a turn.

As already mentioned, this test does not increase any counter, nor it compromises the storage function.

2.0 ACCOUNTING

The electronic card of the machine stores all data relating to collected amounts and sales. These data are at operator's disposal through some counters. In order to visualize them, in the programming mode, select the parameter "tttt" using the keys ① and ②.

The display will visualize:

t t t t

Press the key ③ and choose, through the keys ① and ②, the counter to visualize (please refer to the table here below).

The counters may be reset by pressing CANC at the end of the menu tttt..

In order to confirm resetting, press ③.

The parameters of the available counters are shown in the table here below.

Item	Description	Limits
ICt	Total amount collected in local currency	0<ICt<9999.99
ItP	Credits given to transponder key or chip card	0<ItP<9999.99
StP	Sales made through transponder key or chip card	0<StP<9999.99
SEL	Sales made cash	0<SEL<9999.99
rES	Total amount collected of remaining credit	0<rES<9999.99



MD04309A

tSP	Non used	n.u.
rIC	Non used	n.u.
CIC	Non used	n.u.

2.1 RESTORATION OF STANDARD CONFIGURATION

Through this option all the programming parameters are restored to the manufacturer's standard value, as shown in the table here below.



Considering the possible presence of unwelcome adjustments, we recommend not to use this function.

In order to start reconfiguration, in the programming mode, select the parameter “St.CF” using ① and ②.

The display will visualize:

S t. C F

Then press the key ③ and select through the keys ① and ② (no – yES). To confirm the choice, and therefore **start with restoring all the standard values**, press the key ③.

Table of standard values

Item	Description	Std. Values
CCII	Counter of dispensed products paid cash	C1÷C3 = 0
POtE	Setting of the type of power supply	REtE
coL	Setting of the storage function	C1÷C3 = 0
CHIA	Setting of the communication protocol	NO
tttt	Accounting	lct;ItP;StP;SEL;rES; = 0

buCr	Setting of the change persistency time	240
EEEE	Currency setting	0,05
LLLL	Setting of the coin acceptor lines	L1=0,05 / L2=0,1 / L3=0,2 L4=0,5 / L5=1 / L6=2
PPtt	Setting of prices for payment through key	P1+P3 = 0
PPII	Setting of prices for payment cash	P1+P3 = 0
CCtt	Counter of dispensed products with payment through key	C1+C3 = 0

2.2 SETTING OF MDB PROTOCOL

As mentioned in the user's manual, the machine can be connected with key payment systems (transponder – chip card). In this case, for the required interface two communication protocols are mainly used: “EXECUTIVE” and “MDB”.

In the machine the MDB protocol is used.

In order to know manufacturers and models to be used, please get in contact with the technical assistance centre.



The MDB protocol is supported by an optional interface card, to be asked for when purchasing the machine.

In order to start up the MDB interface, in the programming mode, select, through the keys ① and ②, the parameter “CHIA”.

The display will visualize:

C H I A

Then press the key ③ and select, through the keys ① and ②, the mode to enable (please refer to the table here below).

no	No protocol enabled
Mdb	MDB Protocol

In order to confirm the choice and get back to the previous menu, press ③.



After modifying the parameter “CHIA ” and the connection of a payment system, it is necessary to switch off and then re-start the machine.

2.3 SETTING OF STORAGE FUNCTION

As mentioned in the user's manual, it is possible to start the storage function counting the dispensed products. Knowing the maximum number of products to be dispensed from each shelf, this option allows to disable such shelf if no more products are available.

Therefore, in order to start up the storage handling, it is necessary to assign to each shelf the maximum number of products that can be included.

Select from the programming menu the parameter “coL” using the keys ① and ②.

The display will visualize:

coL

Press the key ③ and select, through the keys ① and ②, the first shelf to set the relevant configuration (ex. shelf no.1).

The display will visualize:

c 1

Confirm the selection pressing the key ③. The display will visualize the previously set value. Through the keys ① and ② set the correct value, then press again ③ to save. Setting the value to 0, the inventory function for that column will be disabled. Set the values of the remaining shelves following for each the above mentioned procedure.

If a customer selects a shelf where there are no more products, the display will visualize:

SOLd

At this point, another shelf can be selected.

2.3.1 STORAGE INVENTORY

If the storage function as described in item 2.3 is started, it is essential to perform, on every refilling of the machine, an inventory operation that restores the storage counters informing the machine of the refilling. To this purpose, **it is necessary to refill completely every shelf subject to the storage function** otherwise it will not be possible any more to check the machine product stocks.

In order to carry out the inventory operation, after filling the shelf involved, in the programming mode, select the item “IIII” from the main menu through the keys ① and ②.

The display will visualize:



Then press the key ③ and select, through the keys ① and ②, (yes – no) to proceed, or not, with the inventory. Confirm the choice and get back to the previous menu through ③.

2.4 ERROR MESSAGES

Wrong programming operations or some of the most dangerous troubles are signalled by the machine display, thus allowing to take proper steps in good time. The table here below summarizes some of them.

Error	Cause	Effect	Possible Solution
<i>Er 1</i>	Breakage of self-stoppage of a motor or motor jammed.	All the selections are disabled.	Replace the damaged motor or remove the cause of stoppage. Switch off and restart the machine.
<i>Er 2</i>	One or more product dispensing motors cannot work.	The selection where the trouble has occurred is disabled. The machine continues working regularly.	Replace the non-operating motor. Switch off and restart the machine.
<i>Er 9</i>	Communication problems with the MDB payment system.	The payment system is not working.	Check connections with payment system. Switch off and restart the machine. Apply to the service centre.



If power is supplied by battery, disconnect and re-connect battery with the machine.



MD04309A