




# Ayra Micro

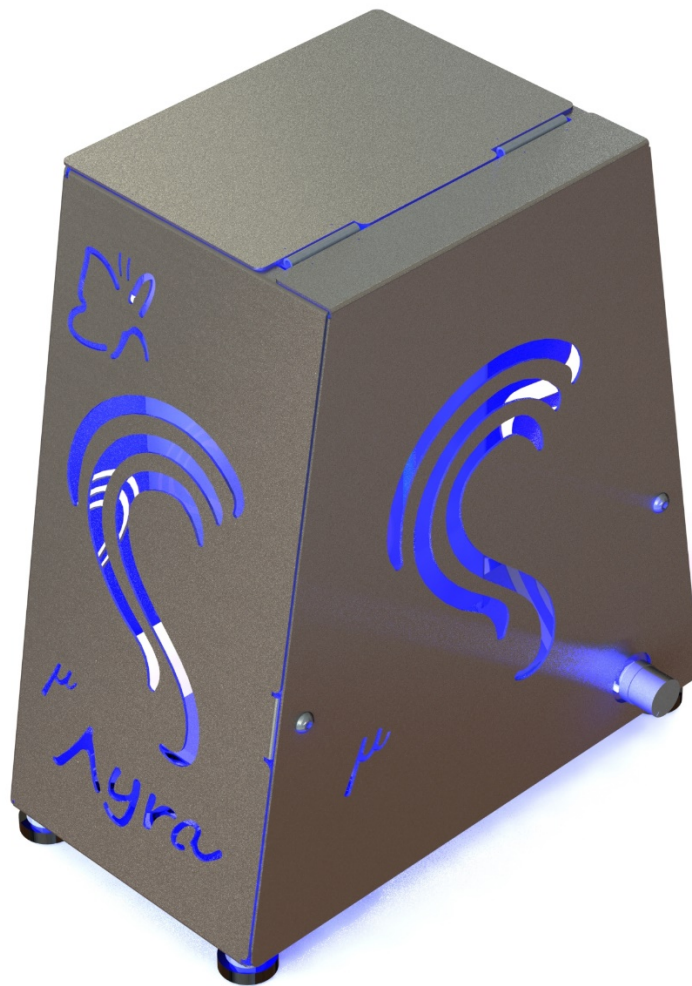



*Contenuto del documento istruzioni d'uso*

|  |           |
|--|-----------|
| <b>1.1. GENERAL PRECAUTIONS AND WARNINGS.....</b>                | <b>3</b>  |
| <b>5.6. General information .....</b>                            | <b>3</b>  |
| <b>5.6. Intended use of the machine.....</b>                     | <b>4</b>  |
| <b>5.6. Guarantee .....</b>                                      | <b>5</b>  |
| <b>5.6. Packaging.....</b>                                       | <b>5</b>  |
| <b>5.6. Machine identification.....</b>                          | <b>5</b>  |
| <b>1..1. Contacts .....</b>                                      | <b>6</b>  |
| <b>2. COMPONENTS .....</b>                                       | <b>7</b>  |
| <b>2.1. Components .....</b>                                     | <b>7</b>  |
| <b>3. OPERATIONS .....</b>                                       | <b>8</b>  |
| <b>3.1. Charge the liquid: .....</b>                             | <b>8</b>  |
| <b>3.2. Insert the power supplier jack into the socket .....</b> | <b>8</b>  |
| <b>3.3. Turn on the machine .....</b>                            | <b>9</b>  |
| <b>3.4. Ratio work/pause regulation .....</b>                    | <b>9</b>  |
| <b>3.5. How to empty the tray.....</b>                           | <b>11</b> |
| <b>4. TROUBLESHOOTING .....</b>                                  | <b>13</b> |
| <b>5. SAFETY WARNINGS .....</b>                                  | <b>15</b> |
| <b>5.1. Child safety.....</b>                                    | <b>15</b> |
| <b>6. MAINTENANCE AND CLEANING .....</b>                         | <b>16</b> |
| <b>7. DISPOSAL .....</b>   | <b>16</b> |

## 1.1. GENERAL PRECAUTIONS AND WARNINGS

*WE CONGRATULATE WITH YOU FOR THE CHOICE OF A PROJECT VENDING MACHINE. THIS PRODUCT HAS BEEN DESIGNED BY EXPERIENCED TECHNICIANS AND IS BUILT ACCORDING TO THE HIGH-QUALITY STANDARDS THAT HAVE ALWAYS DISTINGUISHED THE PROJECT VENDING PRODUCTS. THIS PUBLICATION WILL HELP YOU GET TO KNOW YOUR APPLIANCE BETTER: WE RECOMMEND YOU TO READ IT CAREFULLY AND FOLLOW ITS ADVICE.*

*THIS DOCUMENT CONTAINS CONFIDENTIAL INFORMATION PROPERTY OF PROJECT VENDING. THE CONTENT OF THIS DOCUMENT MAY NOT BE DISCLOSED TO THIRD PARTIES, COPIED OR DUPLICATED, IN ANY FORM, IN WHOLE OR IN PART, WITHOUT PRIOR WRITTEN APPROVAL OF PROJECT VENDING. USE, TRANSLATION, DUPLICATION OR DISCLOSURE OF THE TECHNICAL INFORMATION CONTAINED IN THIS DOCUMENT MAY BE PROTECTED BY PROJECT VENDING THROUGH LAW.*

## 5.6. General information

All the information contained in this manual is aimed at obtaining the best performance from the machine in the context of the use envisaged by the manufacturer.

This manual brings together all the notions and instructions for loading and cleaning the machine, as well as instructions reserved for specialized technicians for more complex operations.



**This manual should be kept near the machine. To receive a new manual, in the event of loss or damage to the one supplied, it is necessary to communicate to the manufacturer the identification data of the machine shown on the serial number label.**

In compliance with the care taken by the company to make improvements to the product whenever possible, Project Vending reserves the right to perfect future production (and the content of the related manuals) without giving prior notice and without any obligation to update products already on the market.



### IMPORTANT:

- Read these instructions carefully before using the machine.
- The machine installation and maintenance operations must be carried out by qualified personnel only.

- The user must absolutely not access those machine areas whose protections are blocked with systems that require the use of tools to be removed.
- The machine is not suitable for outdoor installation, it must be placed in dry rooms with temperatures between + 1 ° C and + 40 ° C and where no water jets are used for cleaning.
- This appliance has not been designed to be used by people (including children) with reduced physical, sensory and mental abilities or lacking the necessary experience and competence, unless they are supervised or instructed to use the appliance by a person responsible for their safety. Pay special attention to children to prevent them from playing with the appliance.
- The reliability of the machine is guaranteed only through the use of original spare parts.
- To ensure correct operation, keep the machine in perfect clean conditions at all times.



**Project Vending declines all responsibility for any damage that may, directly or indirectly, derive to people or things as a result of:**

- Improper use of the machine;
- Incorrect installation;
- Inappropriate power supply;
- Serious deficiencies in maintenance;
- Unauthorized interventions or modifications;
- Use of non-original spare parts;
- Exceptional atmospheric events.

In the event of a breakdown, Project Vending is not committed in any way to compensate for any economic damage due to forced shutdown of the appliance or to extend the warranty period.



**It is absolutely forbidden to make changes to the electrical system of the machine.**

## 5.6. Intended use of the machine



The use of the "AYRA machine" is to be used exclusively for the diffusion in a clean environment of the sanitizing liquid supplied with the machine. The machine must be intended only for the use for which it was expressly designed and built. Any other use is to be considered improper

## 5.6. Guarantee



The company guarantees its machines against constructional mechanical defects for a period of 12 months. Damage resulting from improper use of the machine, such as a voltage other than that prescribed, neglected cleaning, etc. are not covered by warranty. Any technical intervention due to misuse will be the sole responsibility of the user. The manufacturer reserves the right to modify without notice the characteristics of the equipment presented in this publication: furthermore, it declines all responsibility for possible inaccuracies attributable to printing and / or transcription errors contained in the same.

## 5.6. Packaging

The machine is delivered packed, in a cardboard box, The machine is supplied with:

- Installation, use and maintenance manual;
- Bottle with check valve included
- Power cord.

## 5.6. Machine identification



The identification medium is the plasticized plate on which the data to be mentioned to the manufacturer in case of need are reported, this plate is the only one recognized as valid by the manufacturer as a product identification tool.  
The identification plate is placed inside the machine (see components drawing).



**Do not damage, remove cover the supports necessary for the identification of the product and the safety stickers**

In the event of technical problems, it is important to know how to indicate to the after-sales service the fundamental data of the machine (model, code and serial number), indicated on the label (see example of data) placed inside the machine (on the panel that supports the electronic board).



**Figure 1 Identification label**

### 1.1.1. Contacts



The Project Vending technical service is available to provide any information:

**Project Vending s.r.l.**

**Via Risorgimento 20 - 31047 Ponte di Piave (TV) – Italia**


**Tel. 0422 895107 E-mail [info@projectvending.it](mailto:info@projectvending.it)**

## 2. COMPONENTS

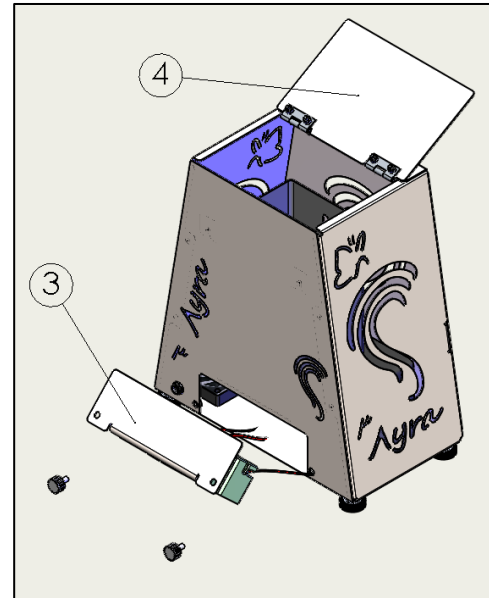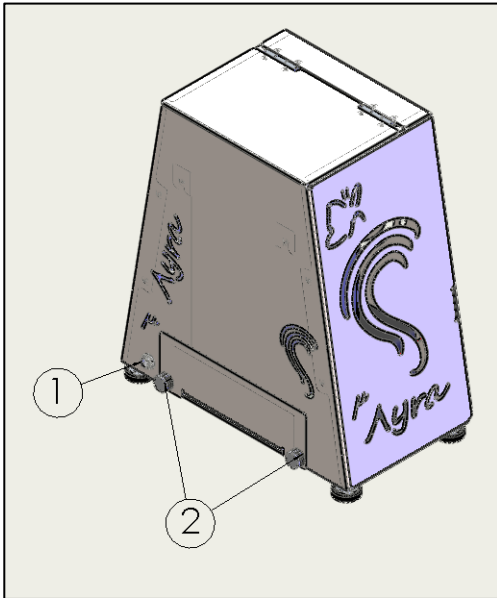

### 2.1. Components


1. Power cable socket
2. Threaded knobs for drawer extraction
3. Drawer with level tray
4. Door for bottle compartment
5. Bottle supplied for sanitizer liquid
6. Check valve
7. Switch-on potentiometer and work/pause ratio adjustment

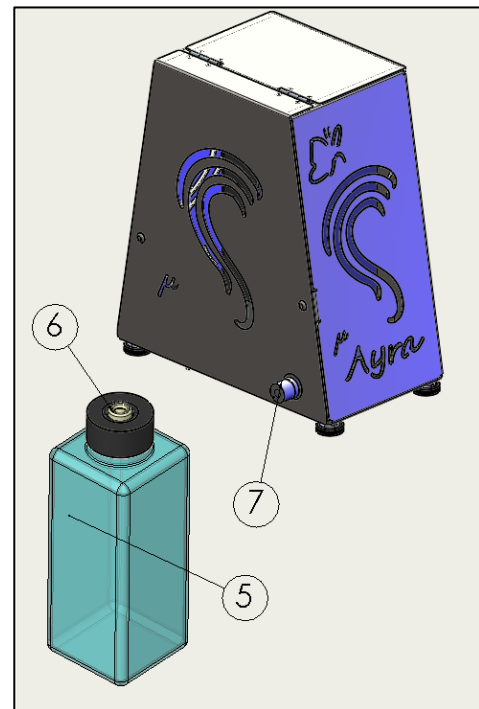


### 3. OPERATIONS

#### 3.1. Charge the liquid:

Fill the bottle and insert it gently head down into its compartment, until its seat

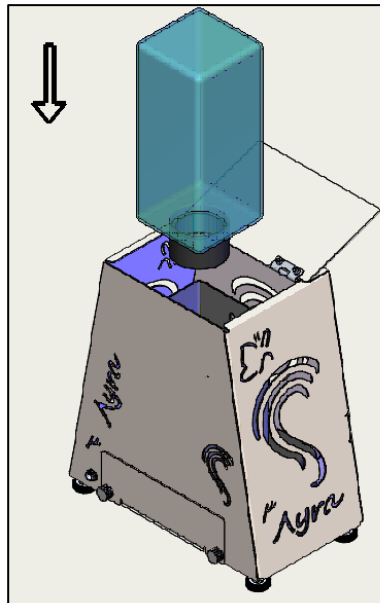


#### 3.2. Insert the power supplier jack into the socket

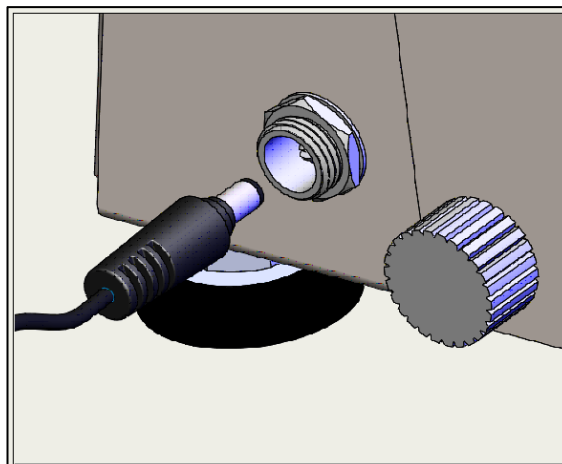



### 3.3. Turn on the machine


Rotate lightly clockwise (untill feeling the click) to switch on the machine

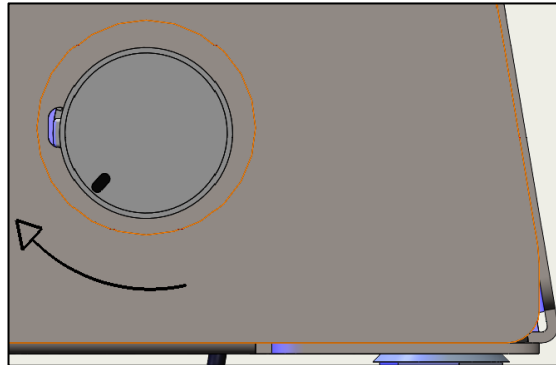


IF IT IS THE FIRST USE OR IF THE MACHINE HAS BEEN STOPPED FOR A LONG TIME, WAIT FEW MINUTES BETWEEN INSERTING THE BOTTLE AND TURNING ON THE MACHINE, IN ORDER TO ALLOW THE FILTER TO GET COMPLETELY MOIST

### 3.4. Ratio work/pause regulation

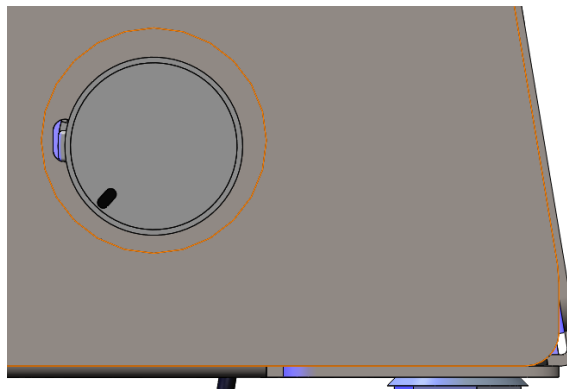

With the potentiometer at the minimum, the machine works on ratio 15min./ 5min. of works/pause circa.

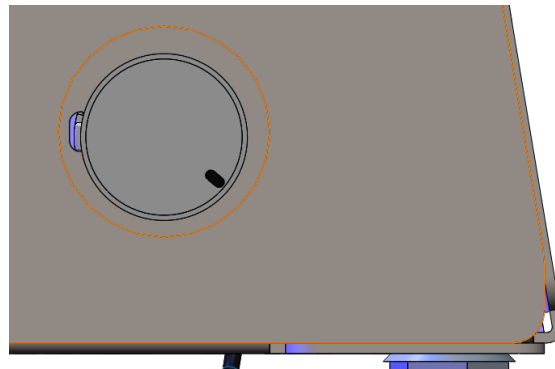

At the maximum, the ratio is 15min./ 50min. of works/pause circa.



Posizionando il potenziometro in una posizione intermedia, anche il rapporto Lavoro/pausa sara' un tempo intermedio tra il minimo e massimo descritto sopra.

|   |   |
|---|---|
|   | <p><u>PLACING THE POTENTIOMETER IN AN INTERMEDIATE POSITION, ALSO THE RATIO WORK / PAUSE WILL BE AN INTERMEDIATE TIME BETWEEN THE MINIMUM AND MAXIMUM DESCRIBED ABOVE</u></p> |
|  | <p><u>DO NOT USE DISTILLED WATER, OTHERWISE THE LEVEL SENSOR DETECTS ABSENCE OF LIQUID.</u></p>   |

### 3.5. How to empty the tray

In case of need to carry the machine, or rotate it, or if the liquid level into it is over the nebulizers height

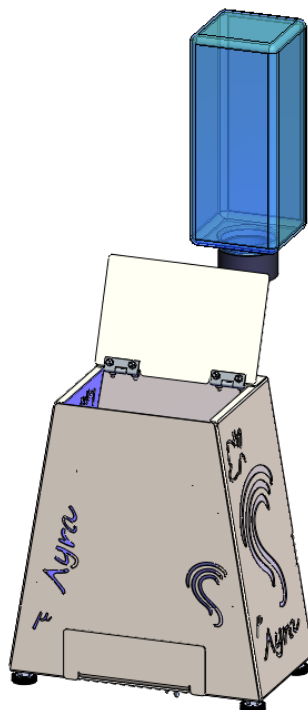


Figura 2: REMOVE THE BOTTLE

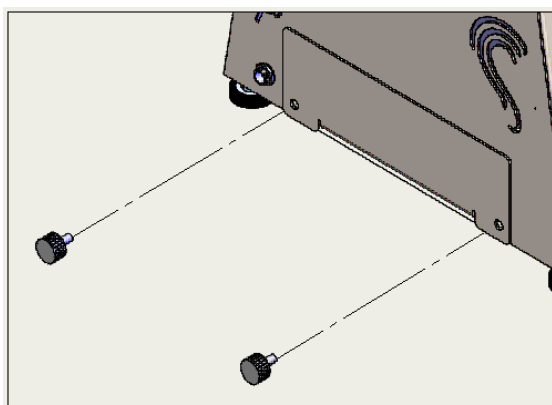


Figura 3: UNSCREW THE TWO KNOBS

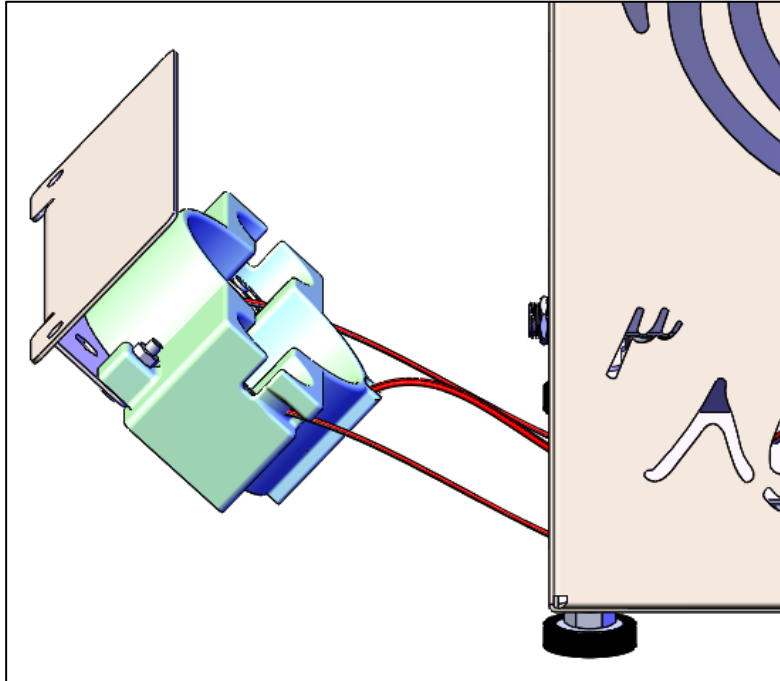
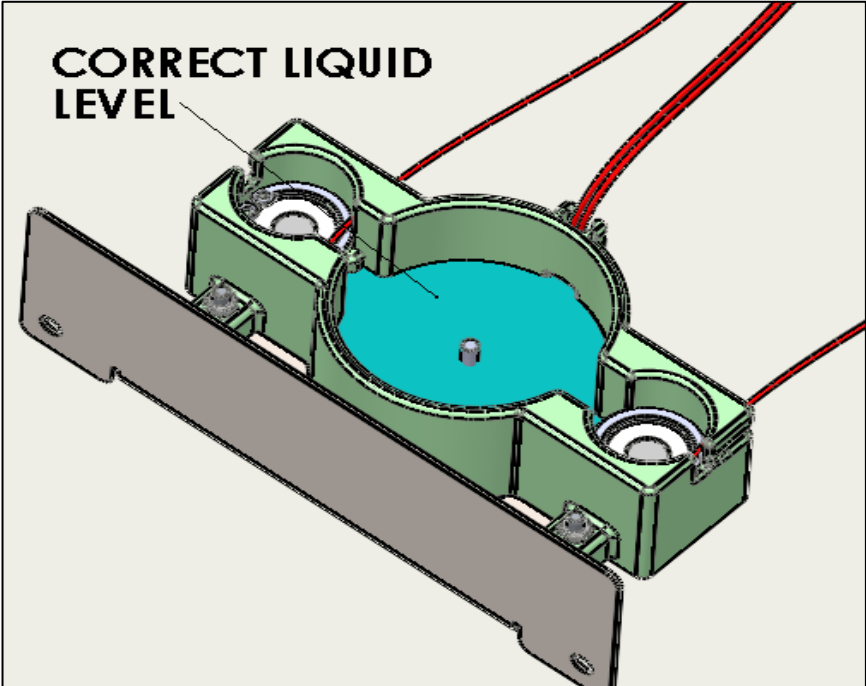


Figura 4: GENTLY PULL OUT THE DOOR, BEING CAREFUL NOT TO BREAK THE CABLES AND EMPTY THE LIQUID INSIDE THE TRAY. THEN CLOSE IT AGAIN WITH THE KNOBS

#### 4. TROUBLESHOOTING

| PROBLEM  | POSSIBLE SOLUTIONS   |
|--|--|
| <p>THE LEDS FLASH (<i>LEVEL SENSOR DOES NOT DETECT LIQUID</i>) AND THE MACHINE DOES NOT NEBULIZE</p> | <ul style="list-style-type: none"> <li>• Check if you have inserted the bottle with the liquid</li> <li>• If the machine has been switched off for a long time or it is the first use, once the liquid has been inserted, wait few minutes before switch on the machine in order to allow the filters to moisten completely</li> <li>• Check if the bottle has been inserted correctly until its seat</li> </ul>   |
| <p>THE MACHINE IS WORKING BUT DOESN'T NEBULIZE</p>   | <ul style="list-style-type: none"> <li>• Check, by pulling out the drawer, that the liquid level is LOWER than the height of the nebulizers. If it's higher, empty the excess from the tray, close the drawer and make sure to insert the bottle correctly: gently, and avoiding squeezing it once inserted</li> </ul> <div data-bbox="571 1037 1441 1720" data-label="Image">  </div> |

THE BOTTLE LOSES  
LIQUID WHEN IT IS  
TURNED OVER TO BE  
INSERTED INTO THE  
MACHINE

- Check that you have closed the crew cap correctly
- Check if the liquid comes out from the central valve, which does not close correctly. If so, try to press it gently it 2-3 times with a fine tool. Release it and try again to overturn the bottle to check the liquid does not come out.



## 5. SAFETY WARNINGS

The construction and safety analysis of the machine refer to current standards and correct installation and maintenance procedures. Any intervention other than ordinary maintenance must be carried out with the power plug disconnected. In the vicinity of the machine it is mandatory to use suitable clothing as indicated in this manual and by the laws in force in the country where the machine is used; loose and fluttering dresses, belts, rings and chains should be avoided in any case; the hair, if long, must be collected in a special cap. It is absolutely forbidden to operate the machine with the fixed and / or mobile guards removed or with the safety devices excluded. It is absolutely forbidden to remove or tamper with the safety devices. Do not carry out any maintenance or adjustment of the machine without having read and assimilated the contents of this manual. Adjustment operations with reduced or partially excluded safety devices must be carried out by one person only and, during their execution, access to the machine must be prohibited to unauthorized persons.

Make sure the safety labels are in good condition and study their meaning: they are necessary to avoid injuries; if these are damaged, lost or belong to replaced components, they must be replaced with other originals requested from the Manufacturer, placing them in the exact position as indicated in this manual. It is good to remember that during use or maintenance, a prudent operator in good physical and mental condition is the best safety against any injury.



**In case of fire do not use jets of water against the machine as they could cause short circuits with consequent serious accidents for the people present.**









**Any intervention other than ordinary maintenance must be carried out with the power plug disconnected.**

### 5.1. Child safety




Keep the packaging material of the appliance out of the reach of children.  
Do not allow children to play with the machine.  
Keep the sanitizing and regenerating liquid out of the reach of children.

## 6. MAINTENANCE AND CLEANING

|   |   |
|---|---|
|    | Connect the power cord to the mains   |
|    | Press the main switch (1) to the "0" position.  |
|    | Extraordinary maintenance, repair and adjustment operations must be carried out by authorized technical personnel       |
|    | Cleaning operations must be carried out with the machine disconnected from all energy sources (machine in safety mode). |
|  | After maintenance and / or cleaning, make sure that no foreign objects remain inside the machine.                       |
|  | The use of water jets for cleaning the machine of any size and direction is prohibited.                                 |

## 7. DISPOSAL

For a possible demolition of the machine, it is recommended to disassemble the device by dividing its parts according to the nature of the construction material (plastic, metal, paper, etc.). Entrust the disposal of all the parts thus obtained to authorized companies.

|   |  |
|---|--|
|  | The machine was produced with recyclable material. At the time of demolition, proceed according to the local regulations for waste disposal. Make the machine unusable by cutting the power cord. To avoid dangerous situations (e.g. danger of suffocation) for children, break the door lock so that it can no longer be closed. |
|---|--|